


2001-2005 DODGE NEON SRT-4 ALUMINUM RADIATOR GUIDE

1. Disconnect negative cable from battery.
2. Remove the five 12mm bolts and the four pops.
3. Raise and support the vehicle using jack stands.
4. Drain cooling system below upper radiator hose level.
5. Remove the lower fascia close out panel.
6. Disconnect radiator fan electrical connector (Radiator Fan Connector), located in bottom center of fan assembly.
7. Remove the charge air inlet tube and loosen the PCM with bracket assembly.
8. Remove upper radiator hose.
9. Remove air cleaner housing assembly (only if you are using the stock air intake).
10. Disconnect the air conditioning suction hose retaining bracket to front core support and set aside (located on passenger side of radiator).
11. Remove upper radiator fasteners (Radiator Fan Assembly).
12. Move the cooling system fan assembly to disconnect the engine harness connected to the fan bracket and pull out the fan assembly separate from the radiator.
13. Carefully pull out the stock radiator

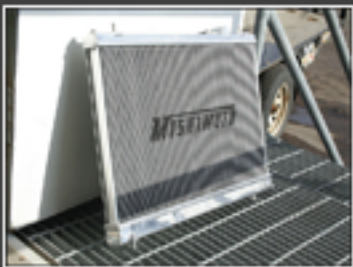

INSTALLATION INSTRUCTIONS

1. Bolt the fan assembly to the Mishimoto Radiator.
2. Tighten the drain plug.
3. Carefully lower Mishimoto radiator into vehicle.



2001-2005 DODGE NEON SRT-4 ALUMINUM RADIATOR GUIDE

1. Install all components in reverse order of radiator removal.



2. Add coolant to the car via the thermostat housing; make sure the heat is on full power with the car running to let air bubbles work themselves out.
3. Lower car and you are ready to go with your new Mishimoto High Performance Aluminum Radiator.

